



# Mini Tiger I Tank

60-4366

## Installing the Batteries

 
### You will need...

One 9V battery for the transmitter  
Six AA batteries for the charging stand  
Phillips screwdriver

### Put Batteries in the Charging Stand



The tank is fastened to the charging stand with a shipping screw.

- Loosen the screw with a Phillips screwdriver to free the tank from the charge stand.
- Slide the battery compartment cover off.
- Insert six AA batteries in the charging stand, matching the polarity symbols (+ and -) as marked inside.
- Replace the cover.

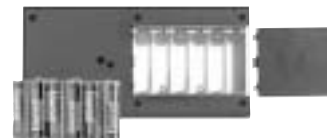

### Put Battery in the Transmitter

 
 
- Turn the transmitter off.
- Loosen the screw on the battery compartment cover with a Phillips screwdriver and remove the cover.
- Insert one 9V battery in the battery compartment, and match the polarity symbols (+ and -) as marked inside.
- Replace the cover and tighten the screw.

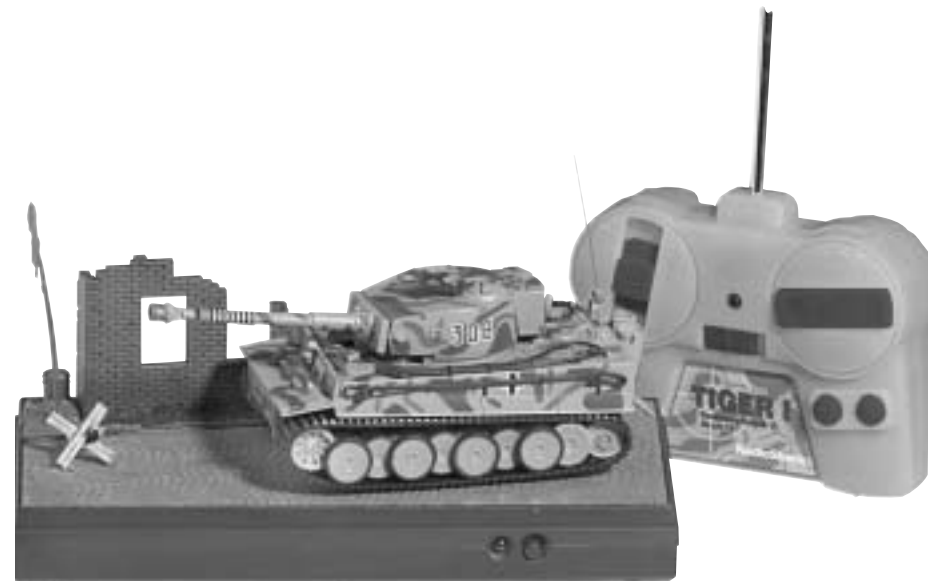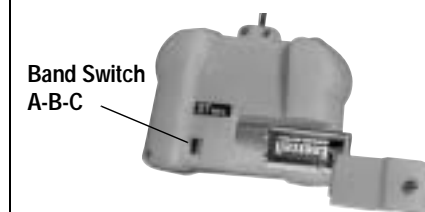

## Charging the Tank

- Turn the tank off and place the tank on the charge stand so the plug fits into the jack on the tank.
- Press the button on the charging stand to start charging the tank. The red LED illuminates.
- Remove the tank from the stand only after the red LED turns off. The charging cycle is complete when this happens.

  **Note:** It takes about three minutes to charge the tank.

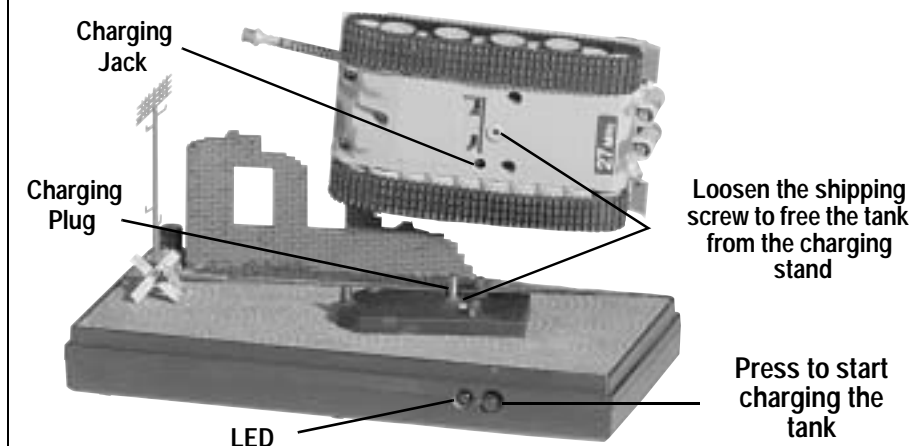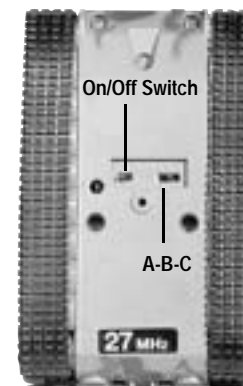

## What's Included

Mini Tiger I Tank ♦ Antenna ♦ Transmitter  
Charging Stand & Clear Case ♦ Owner's Manual

## Driving the Tank

- Thread the supplied antenna into the transmitter's antenna connector tightly.
- Turn the tank and transmitter on.
- Use the steering and speed controls on the transmitter to drive the tank.
- Use the buttons on the shoulder of the transmitter to rotate the turret.
- Use the buttons on the bottom right side of the transmitter to fire the machine gun and cannon.
- When you finish driving the tank, turn the tank and transmitter off.

 
### Steering Control

- While the tank is in motion, press and hold the left side of the control to go left and press the right side to go right.
- Release to let the tank go straight.
- Press the left side or right side with the tank in neutral to spin the tank in a circle.

### Speed Control

- Slide the control up and hold to drive forward.
- Slide the control down and hold to drive in reverse.
- Release to stop.

**Note:** After you fire the cannon, wait for the LED light on the tank to go off before you fire it again.

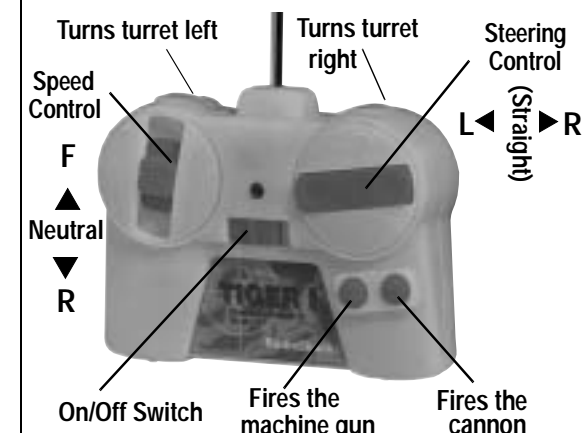

## Helpful Hints

- Be sure to set the tank and transmitter to the same band switch position when driving your tank.
- You can race up to six tanks at one time. Be sure you and your friends have different frequencies (27 or 49 MHz) and do not use the same band switch (A-B-C) position.
- Be sure the tank is not out of the transmitter's range. The range is determined by your surrounding and battery strength. Obstructions, such as buildings and fences, between the transmitter and the tank reduce the range.
- If someone uses a CB nearby, it might interfere with control of the tank. If this happens, move the tank away from the CB.
- You cannot operate your tank near devices with transmitters that use the same frequency as your tank (27 or 49 MHz).
- The tank has a special circuit to prolong battery life. If you keep the left control trigger in one position for more than 45 seconds, the transmitter automatically turns off. If this happens, move the control trigger to another position to continue driving.
- If the tank moves slowly after you charge the battery, check the wheel mechanisms for lint, thread, hair and dust.
- When you finish with the tank, place it on the charging stand and replace its clear case. Always hold the stand's base when you move the stand. Never hold the clear case.
- Do not remove the tank from the charge stand while the indicator is on.

## The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your radio-controlled vehicle.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

## Battery Notes

- Use only fresh batteries of the required size and recommended type. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the transmitter or charging stand.
- If you do not plan to use the tank for several days, remove all the batteries from the transmitter and charging stand. Batteries can leak chemicals that may destroy electronic parts.
- Do not charge or recharge the tank while it is still on.
- Do not charge the tank's battery too often. Run the tank until the battery fully discharges and the tank stops. Then charge the battery; this extends the battery's ability to fully recharge.
- If the tank runs slowly or does not move at all, recharge the tank.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

## Care & Use

- Do not drive the tank into people or objects.
- Keep the tank dry; if it gets wet, wipe it dry immediately.
- Use and store the tank only in room temperature environments.
- Handle the tank carefully. Do not drop it.
- Keep the tank away from dust and dirt.
- Wipe the tank with a damp cloth occasionally to keep it looking new.
- If your tank is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the tank's internal components can cause a malfunction, invalidate its warranty and void your FCC authorization to use it.

## Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for 90 days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

60-4366  
Printed in China  
Date 07A03